

Fitting instructions for dashboard pocket for New Defender


1.
New Defender
dashboard shelf



2.
Unscrew the
4 screws on the
outer panel
with a Torx T30



3.
Remove the panel

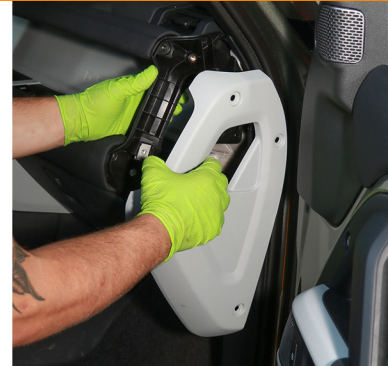

4.
Unscrew the
black screw with
a Torx T20



5.
Loosen the front
panel carefully



6.
Take off the
front panel



7.
Unscrew the
3 screws under
the panel
with a Torx T30



8.
Insert the bag into
the opening with
the transparent
side facing
upwards



9.
Screw in bottom
3 screws until they
grip (Torx T3).
Do not tighten yet



10.
Push the bag's
entire top rail
upwards into the
slot between
paneling and
plastic




11.
Press the rail
evenly into
the slot



12.
If you feel
resistance,
the position
is correct



13.
Tighten the
bottom screws
once the rail
has been inserted

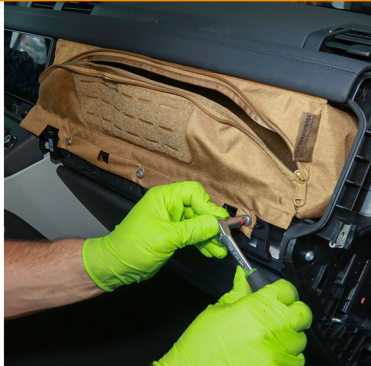


14.
Reattach the
front panel



15.
Press the front
panel onto
the fittings
until it clicks



16.
Screw on the
front panel
with a Torx T20

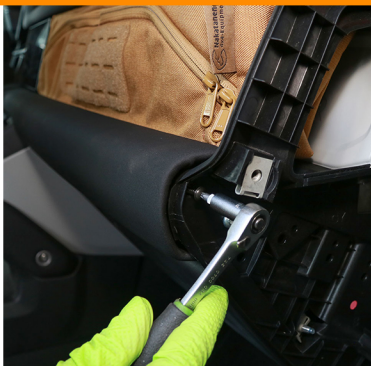

17.
Fasten the side
panel with
a Torx T30



18.
Done!

